

Built on Tradition



Underground Cylindrical Oil/Sand Interceptors

HT-2051

User Manual


Installation, Operation & Maintenance

Carefully read and follow the instructions in this manual.

Single Basin, Double Basin

Triple Basin, Quad Basin

Single-wall & Double-wall

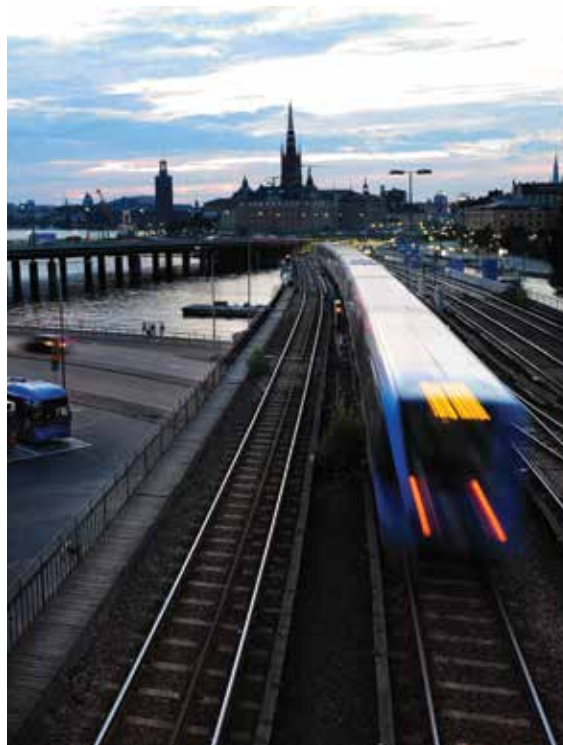

MADE IN

U. S. A.

Warning and Disclaimer

This manual is intended for use only by persons knowledgeable and experienced in underground oil/sand interceptor installation, operation and maintenance. This manual provides general guidance, and conditions at your site may render inapplicable some or all of the guidance. If you are uncertain, or require clarification or further instruction, please contact Highland Tank prior to commencing any installation, operation or maintenance procedure. You are solely responsible for compliance with all federal, state and local laws, regulations and ordinances applicable to your installation and operation. Highland Tank disclaims all liability related to any misuse of the tank or failure to follow all guidance and instruction provided by Highland Tank.

Contents

Installation	7
Piping & Venting	19
Start-up	28
Operation	31
Maintenance	33
Troubleshooting Guide	40
OSI Reference Drawing	42
Appendix - A - Sample Inspection and Maintenance Log	

Introduction

Thank you for purchasing a Highland Tank Oil/Sand Interceptor - the leading high-performance interceptor in the industry.

The purpose of this manual is to provide detailed information on the installation, venting, startup, operation, maintenance and trouble-shooting of Highland Tank's Oil/Sand Interceptor.

These instructions should be used in conjunction with any and all other applicable installation and corrosion protection system instructions, e.g.:

- Highland Tank's HighGuard Tank Installation Instructions, HT-7001.
- Petroleum Equipment Institute Installation of Underground Liquid Storage Systems, PEI/RP100.
- Steel Tank Institute ACT-100-U® Installation Instructions, R971 or STI-P3® Installation Instructions, R821.
- Any and all applicable federal, state and local codes.
Always check with Authority Having Jurisdiction (AHJ).

Note: This manual is based on standard OSI configurations. Other custom configurations are available. Verify the supplied configuration prior to installation and testing.

Abbreviations used:

OSI – Oil/Sand Interceptor

AHJ – Authority Having Jurisdiction

PSIG – Pounds per square inch gauge

OSHA – Occupational Safety and Health Administration

Important points to consider prior to installation, operation and maintenance of the OSI:

Carefully read and follow instructions in this booklet. Local codes may apply. Check with local AHJ prior to installation of OSI.

- Ensure adequate site space - almost all products are delivered on a 75 foot long tractor-trailer. Allow space for unloading, positioning and temporary storage if applicable. Contact Highland Tank if special delivery considerations are needed.
- Ensure the crane has adequate lifting capacity and clearance - have operator check site for clearances (overhead, turning, etc.). Spreader bars may be required for larger OSIs.
- Ensure that installation staff have knowledge proper procedures and inherent dangers associated with OSI installation for the storage of flammable and combustible liquids. Reliance on skilled, professional staff, can help avoid system failures and accidents.
- OSIs that are 10 foot diameter and larger are typically shipped rotated to minimize over-the-road height. They must be lifted from the hauling trailer by the supplied lifting lugs on the heads of the OSI. They must then be rotated before final lifting into the excavation. Spreader bars and/or adequate lifting straps must be available to maintain recommended safe lifting capacity. Please check approval drawing for overall length of the OSI and location of the head lifting lugs.
- DO NOT rotate the OSIs while they are still on the trailer - damage may result. OSIs must be lifted from the trailer, using the lifting lugs supplied on the heads, and lowered onto a flat area, free from anything that may cause damage to the exterior coating. Once the OSI is stable, the lifting device may need to be repositioned and then reattached to the lifting lugs on the top centerline of OSI. At this point, slowly roll the OSI to upright position on the ground before lifting to place in final resting position.
- Special permits may be required for weight, size, etc. by local code.
- Barricade the OSI installation area until job is complete.
- Confirm inlet and outlet piping elevations. Coordinate with site plan - check/recheck approval drawing and site plan when OSI arrives.
- Make sure OSI hold-down method/system is predetermined and components are at site for OSI installation. Check anchor-bolt locations if applicable.
- The amount of debris, such as sand, gravel, dirt, leaves, wood, rags, etc., permitted to enter the OSI must be minimized for maximum effectiveness. Installation of an appropriately sized Collection Catch Basin or other similar device upstream of the OSI is recommended.
- The OSI must be kept from freezing at all times. The OSI and piping should be installed below local frost levels. If necessary, a thermostatically controlled steam or electric heating device may be installed.
- **IMPORTANT:** DO NOT modify OSI structure in any way. DO NOT weld on OSI.

Important points to consider continued:

- Detergents and solvents must not enter the OSI. The OSI will not remove chemical emulsions or dissolved hydrocarbons, and their presence retards the recovery of oils that would otherwise be separated.
- Never enter the OSI or any of its enclosed spaces without proper confined space entry training and approved equipment. See OSHA, Regulations for Permit-Required Confined Spaces. 29 C.F.R. § 1910.146.
- Wastewater containing high concentrations of dissolved solids (such as untreated sanitary sewage) must be excluded due to its emulsifying tendency. Wastewater, which exhibits high Biological Oxygen Demand, Chemical Oxygen Demand, and Total Suspended Solids may require additional treatment after the OSI.
- The OSI will not remove chemical or physical emulsions, dissolved hydrocarbons, solvents or Volatile Organic Compounds. Installation of an appropriately sized Highland Tank Oil/Water Separator (brochure HT-2013) with Advanced Hydrocarbon Filtration System (brochure HT-2502) is recommended for treatment of wastewater contaminated with these pollutants.
- Waste oils, such as automobile and truck crank case oil, should not be intentionally drained into the OSI. Filling the OSI with waste oils adversely affects OSI performance. Waste oil should be dumped into a waste holding tank for proper disposal.
- The OSI needs to be maintained to remain as free of accumulated oil and sediment as possible. Suction removal of waste as needed, is the best and recommended method of maintenance.
- The location of your OSI should be in an area with sufficient truck access (top-side clearance) for waste removal.
- An absence of gravity flow to the OSI will necessitate wastewater pumping. Pumping should be restricted to the clean water, effluent end of the OSI. If pumping occurs at the influent end, it will mix the oil and water, increasing the emulsified and dissolved oil content and possibly causing separation failure. If a pump is installed upstream of the OSI, it must be a positive displacement pump (e.g. progressive cavity, diaphragm, sliding shoe), set at minimum flow rate and installed as far upstream as possible to minimize oil/water mixing.
- Piping should be designed to minimize turbulence and promote laminar flow.
- Complete the OSI Installation Checklist and Start-up Report (Form # HT-9039). A copy of the completed form should be retained by the OSI owner and/or installation contractor.
- Complete the HighGuard, ACT-100-U® or STI-P3® Installer Information Card that was included with the delivery documents. This information is required to activate and maintain the Limited Warranty.
- OSI must be filled with clean water before introducing any wastewater. Filling should only be done after OSI has been leveled and anchored in final installation location.

Standard OSI Description

Highland Tank's Oil/Sand Interceptor (OSI) is a wastewater treatment tank designed to intercept and collect sand, grit, free-oil and grease (hydrocarbons and other petroleum products) and prevent their entry into a wastewater stream.


They are typically required in all facilities that conduct washing, servicing, repairing, maintenance or storage of motor vehicles including car washes, commercial vehicle garages, repair facilities, service stations and similar sites where oil or flammable liquids may be introduced into a sewer system.

Designed to accept gravity flow, the OSI's volume and retention time permit these contaminants to separate from the water due to their differences in specific gravity. The OSI contains one to four chambers (basins) where oils separate and float to the surface, while sand and grit settle to the bottom sludge baffle.

These free-floating oils and oily-coated solids accumulate in the OSI until they are pumped out. The clearer water beneath the separated wastes flows downward to the downcomer pipe where it is discharged from the final OSI chamber.

OSI sizing and construction conforms to recognized plumbing codes and the effluent discharge meets or exceeds many municipal industrial sewer pretreatment regulations.

HT-TB Oil/Sand Interceptor Reference Drawing

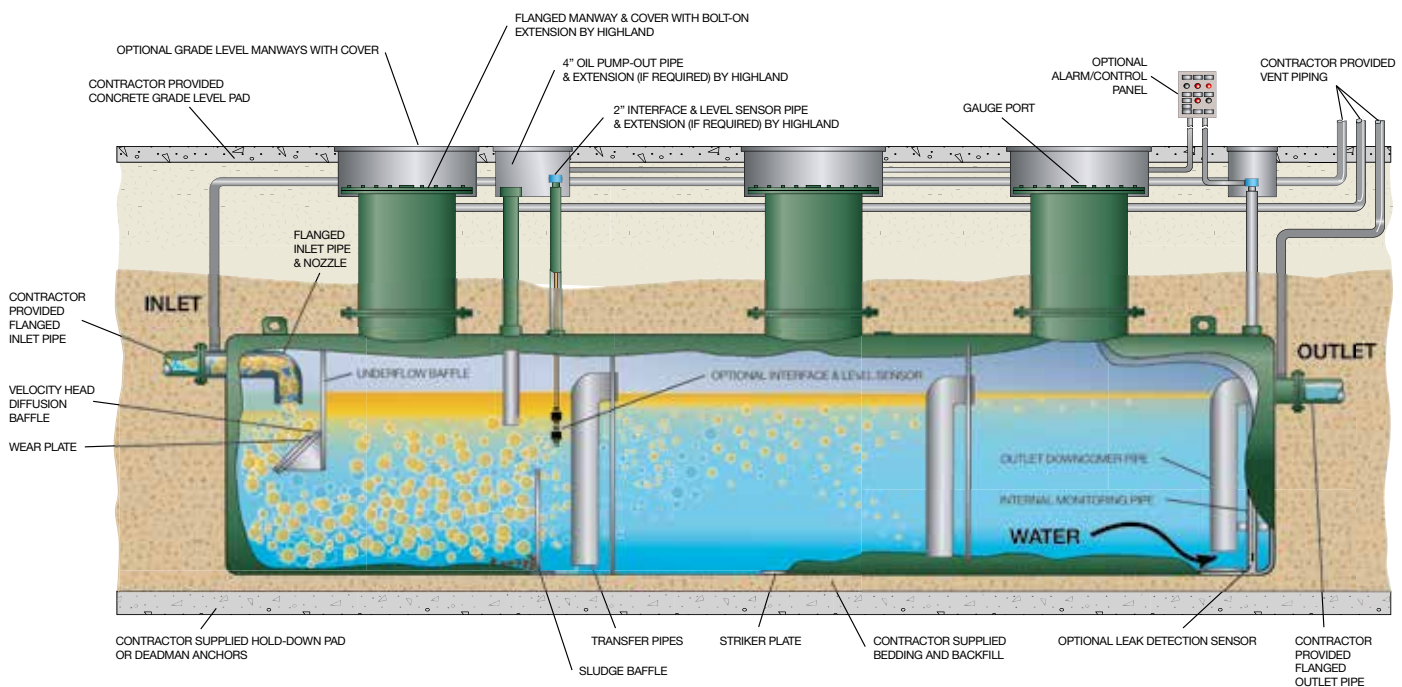

NOTES:
1 - MANWAY AND PIPE EXTENSIONS VARY PER TANK SIZE AND BURIAL DEPTH
2 - SENSOR AND PUMP-OUT PIPES EXTEND TO THE SAME ELEVATION AS MANWAY EXTENSIONS

Installation

Care in Handling OSIs

OSIs must not be dropped, dragged or handled with sharp objects and, except as minimally necessary for inspection and testing, should not be rolled. Lifting equipment must be of adequate size to lift and lower the OSI without dragging, dropping or damaging the OSI or its coating.

OSI Unloading

The OSI must be mechanically unloaded. Use extreme care when unloading as weight distribution of OSI may be uneven.

Lifting and Moving


DO NOT MOVE OSI UNLESS EMPTY. Lifting and moving the OSI must only to be done using the lifting lugs welded to the OSI. OSIs should be carefully lifted, moved and lowered using cables, chains or straps of adequate size. When two lifting lugs are used, the angle between the lifting cable and vertical shall be no more than 30 degrees. See Fig.1. Use a spreader bar where necessary. Maneuver OSIs with guidelines attached to each end of the OSI. If OSIs must be relocated on a job site during installation, they must be lifted and not rolled.

Fig. 1

WARNING:

Under no circumstance should chains or slings be used around the OSI shell.

Always use two lifting lugs to lift OSI

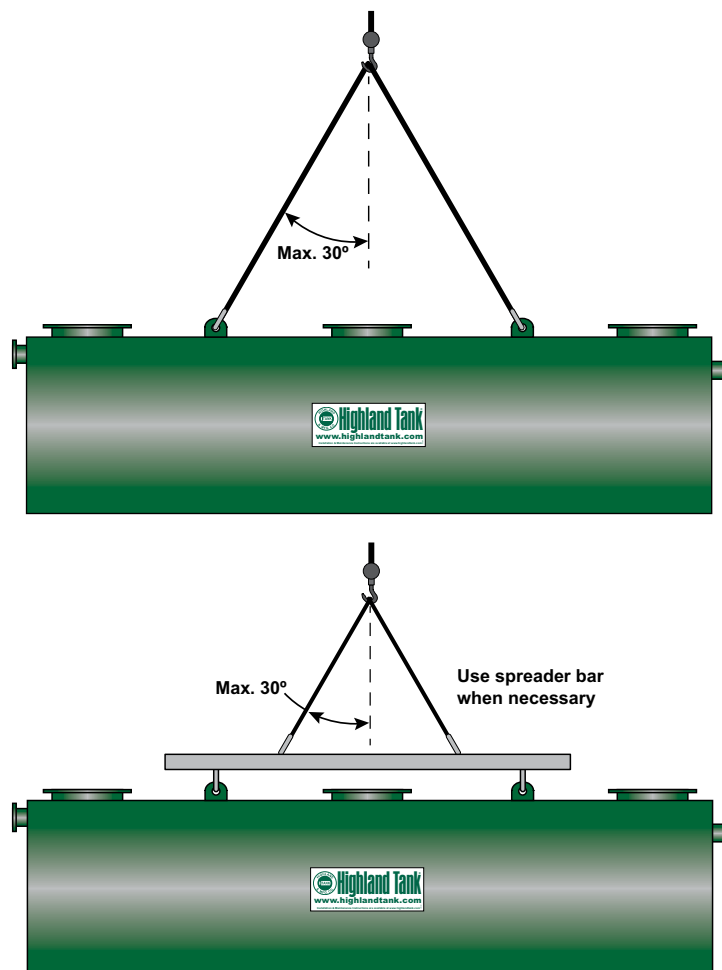

Pre-Installation Inspection & Testing

Upon delivery, visually inspect the OSI for exterior damage that may have occurred during shipping or job site handling. Any damage that could result in leakage or corrosion must be repaired in a manner approved by Highland Tank. Please refer to coating repair instructions below. If an OSI is not buried within 90 days, the OSI should be covered to protect the exterior coating from the effects of ultraviolet light damage.

If the OSI is of double-wall construction and has shipped with a vacuum drawn on the interstice, inspect the vacuum gauge. If the gauge indicates less than 5 inches, re-institute the vacuum to 7 inches. Maintain 5 inches of vacuum for 2 hours before installing the OSI. Do not relieve pressure until OSI is secured in its final resting position.

Internal Piping Inspection

Carefully remove manway covers so as not to damage the gaskets. Inspect the interior of the OSI from above (without entry) to ensure that internal piping is secure and has not been damaged during transport. Do not allow anyone to enter the OSI unless it has been properly prepared for entry and the person entering the OSI has been properly trained for confined-space entry per OSHA, Regulations for Permit-Required Confined Spaces. 29 C.F.R. § 1910.146.

Coating Repair

Before placing the OSI in the excavation, all dirt clods and foreign matter shall be cleaned from the surface of the OSI. Damage to coating surface must be repaired using the supplied touch-up kit.

Visually inspect the OSI for damage. Pay particular attention to areas where coating may have been gouged or abraded. Mark all areas which appear damaged for repair.

Clean damaged OSI coating areas of rust, contaminants or disbonded coating prior to application of touch-up coating.


Areas of coating damage shall be roughened up with coarse grit sandpaper or grinder (see Society of Protective Coatings (SSPC) SP-2 "Hand Tool Cleaning" or SP-3 "Power Tool Cleaning" for additional guidance) to remove all glossiness from the surface surrounding the repair area approximately 6 inches around the damaged area. Re-coat the area with touch-up coating provided. See Fig. 2.

Damaged coatings must be repaired with the repair kit that was delivered with the OSI.

WARNING:

DO NOT ENTER the OSI without following proper confined space entry procedures.

Fig. 2

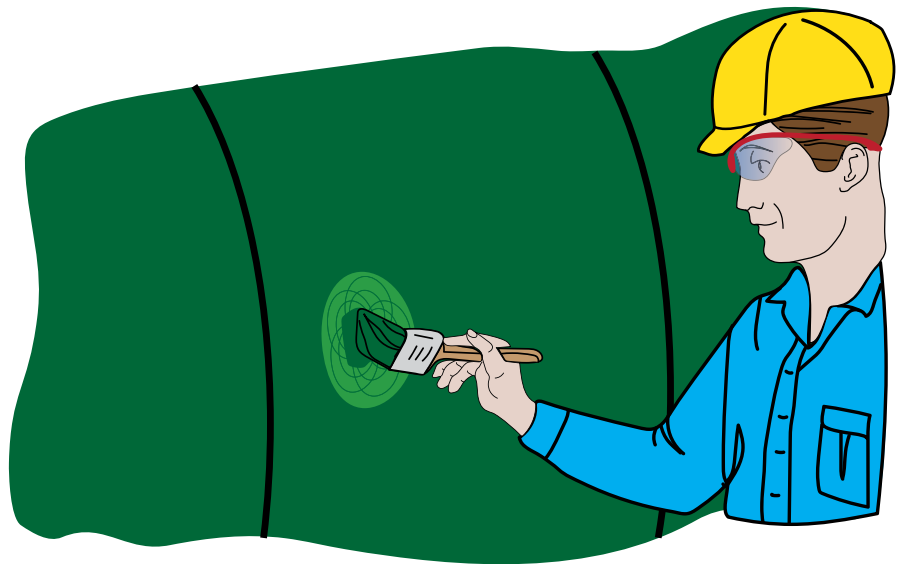

As part of Highland Tank's quality control program, all HighGuard, and ACT-100-U® coated OSI receive a holiday detection test at the factory to ensure coatings are uniform and without holidays.

After repairs have been completed, all repaired areas of the HighGuard and ACT-100-U® protection system coatings shall be re-tested with a holiday detector set at 15,000 volts.

**Anode Integrity
(STI-P3® only)**

DO NOT perform a 15,000 volt holiday test on STI-P3® protected OSIs. Refer to Steel Tank Institute STI-P3® Installation Instructions, R821 for more information.

OSI may be equipped with zinc, magnesium or a combination of both anodes. Consult STI-P3® Corrosion Control System (R821) and Petroleum Equipment Institute PEI/RP100 for further instructions for checking operation, repairing connection and activating.

Pre-installation Tightness Testing Procedures

An appropriate pneumatic or hydrostatic test may need to be performed prior to placing OSI into service, as outlined below. Factory-applied vacuum test may be substituted for on-site testing. Check with AHJ for approval. Take all necessary safety precautions during air tests.

IMPORTANT:

DO NOT leave OSI unattended.

DO NOT apply a vacuum to a single-wall OSI or to the primary tank of a double-wall OSI.

DO NOT connect the air pressure line from the compressor to the interstitial monitoring port of a double-wall OSI.


After pneumatic or hydrostatic testing, release air pressure from the OSI before dismantling testing equipment. For factory applied vacuum, DO NOT relieve vacuum until OSI is secured in its final resting position.

Single-Wall OSI Air Test

Remove factory installed temporary plugs & thread protectors. Apply compatible, non-hardening pipe sealant to threads and install/reinstall liquid-tight steel or cast-iron plugs at all unused openings taking care not to cross-thread or over-tighten plugs. Gasketed manways, lids and blind-flanges must be in place prior to performing air test. (Refer to Steel Tank Institute ACT-100-U® Installation Instructions, R971 or STI-P3® Installation Instructions, R821 if nylon dielectric bushings are present.)

Perform air test for a single-wall OSI as illustrated in Fig. 3 below. Temporarily plug, cap or seal off remaining OSI openings to hold pressure. Open valve A and pressurize the OSI to a maximum of 5 PSIG. Seal the OSI by closing valve A and disconnect the external air supply. Apply a soap solution to all welded seams and fittings. Inspect to assure that no leaks exist.

Fig. 3

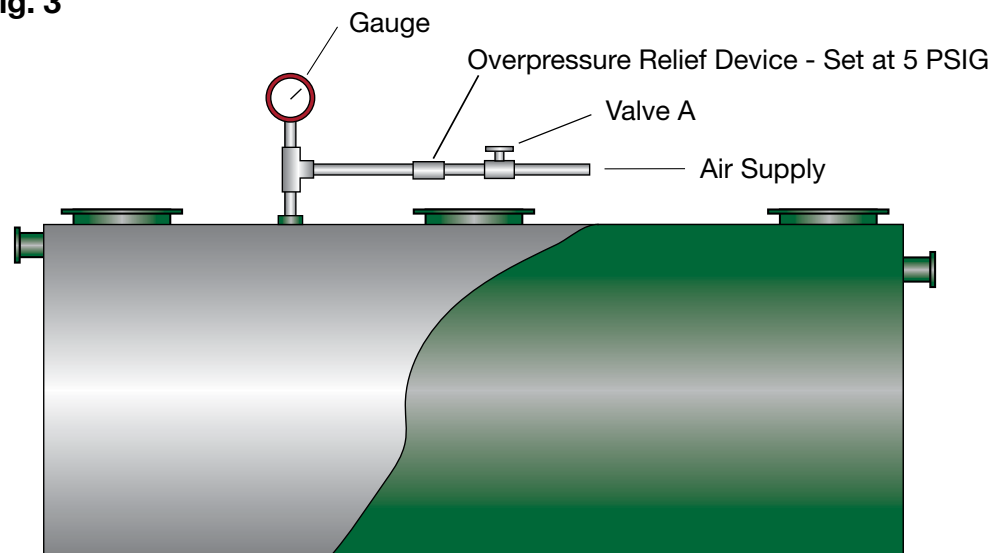

Pre-installation Tightness Testing Procedures continued

Double-Wall OSI Air Test

Double-wall OSIs require different air pressure testing procedures.

DO NOT connect a high-pressure air supply line directly to the interstitial monitoring port.


A double-wall OSI shipped with a vacuum on the interstice need not be subjected to an air/soap test, provided the OSI arrives at the installation site with the vacuum level within designated limits. If the vacuum level has changed significantly, consult Highland Tank.

If the OSI did not ship with a vacuum on the interstice, proceed with the air test as illustrated in Fig. 4 below.

Temporarily plug, cap or seal off remaining OSI openings to hold pressure. Close valve B and pressurize the OSI inner tank to a maximum of 5 PSIG. Seal the inner tank by closing valve A and disconnect the external air supply. Monitor the pressure for a period of 1 hour.

While air tests are generally inconclusive without soaping and the careful inspection for bubbles, this step is recommended to detect a very large leak in the inner tank and prepare for the next step.

Fig. 4

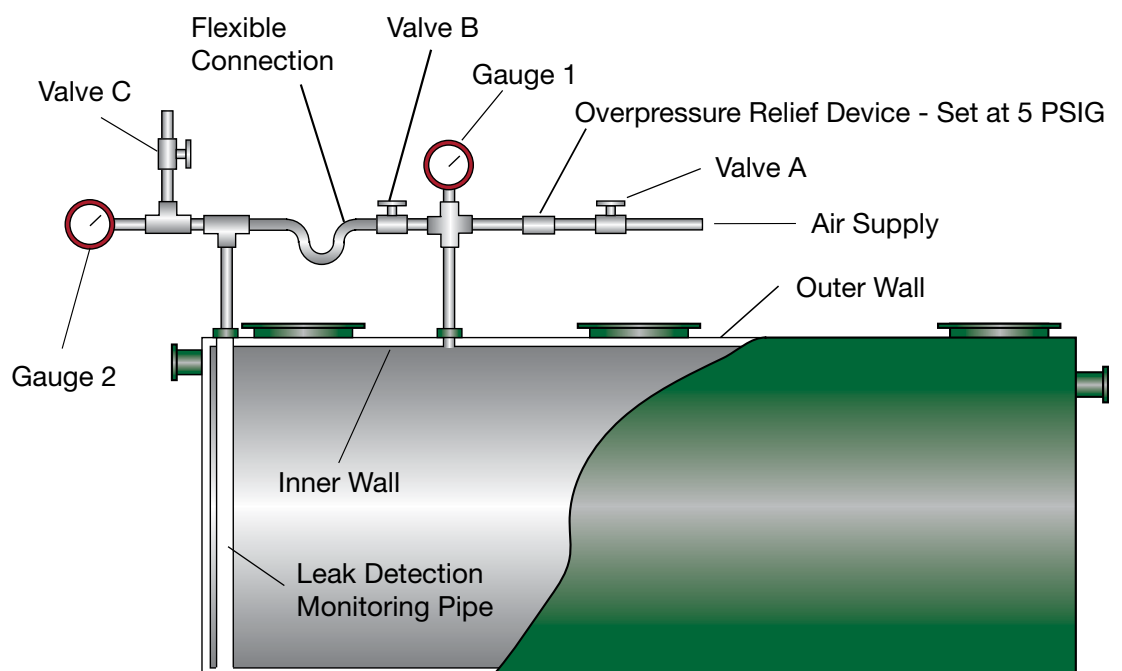

Pressurize the interstice with air from the inner tank by closing valve C, then opening valve B. Allow pressure to equalize.

Soap the exterior of the OSI and inspect for bubbles while continuing to monitor the gauges to detect any pressure drop. Release the pressure from the interstice first by opening valve C, then open valves to release all test pressure and vent both spaces.

Refer to PEI/RP100 and labels on the OSI for testing guidelines.

**Optional Hydrostatic Test
for Single-Wall OSI
if Required by AHJ**

An on-site hydrostatic test of the single-wall OSI may be required by the AHJ before installation to ensure no damage has occurred during shipping and handling.

After the interceptor has been leveled, secured to foundation, and the OSI is fully supported with backfill around the bottom quadrant, fill the OSI with clean, fresh water (See Filling the OSI on page 28.) until water is discharged from the outlet. Allow the OSI to stabilize to a no-flow, static condition. If required by AHJ, attach blind flanges to inlet/outlet and fill completely.

Accurately measure and record the fluid level from the top of the manway to the static fluid level. After one hour, verify that the fluid level has not dropped. A fluid level change would indicate that there may be a leak in the primary tank. If a leak is detected, contact Highland Tank before proceeding.

It is recommended that the hydrostatic test be performed on each separate chamber to ensure there are no leaks between chambers. Close inlet valve and seal off all transfer pipe(s) between chambers with water-tight device. Fill chamber with clean, fresh water and allow to stabilize. Check for leaks between chambers. Contact Highland Tank if a leak is detected.

**Optional Hydrostatic Test
for Double-Wall OSI
if Required by AHJ**

For double-wall OSI, vacuum testing of the interstitial space can be used instead of a hydrostatic test on the primary tank only. If a hydrostatic test is required, follow the procedure as described above.

**Optional Vacuum Test
for Double-Wall OSI
if Required by AHJ**

A double-wall OSI shipped with a vacuum on the interstice need not be retested, provided the OSI arrives at the installation site with the vacuum level within limits designated by Highland Tank. If the vacuum has decayed during shipment, contact Highland Tank before proceeding. If the OSI did not ship with a vacuum on the interstice, proceed with the vacuum test as described next.

Double-wall OSI Vacuum Test

Double-wall OSIs may require vacuum pressure testing of the interstice on site.

If the AHJ requires on-site testing of the OSI, proceed with the vacuum test as follows and as illustrated in Fig. 5 below.

Remove factory installed temporary plug or thread protector from interstitial access point. Apply compatible, non-hardening pipe sealant to threads and install test apparatus.

Perform vacuum test for a double-wall OSI as illustrated in Fig. 5.


- 1 - Open valve A and for maximum air flow.
- 2 - Connect air supply line. (17 cfm's @ 100 psi recommended)
- 3 - Wait for gauge to read 12-15 in. Hg.
- 4 - Close Valve A completely.
- 5 - Remove air supply line

Monitor gauge for one hour or as prescribed by AHJ.
Gauge **MUST NOT** fluctuate more than 2 in. Hg for the duration of the vacuum test.

If leak is detected, contact Highland Tank. After successful vacuum test, open Valve A to release vacuum. Remove test apparatus and proceed with installation.

Refer to PEI/RP200 for additional testing guidelines.

Fig. 5

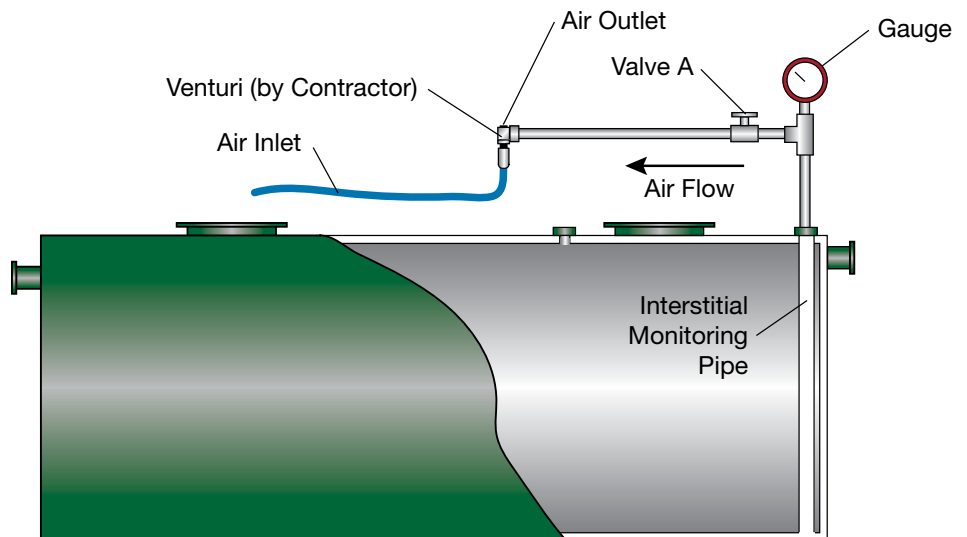

Excavation and Bedding

The excavation should provide adequate space for the OSI(s) piping and associated equipment. It must also be free of any hard or sharp material that could cause damage to OSI coating.

Be certain that foreign matter is not introduced into the excavation or backfill.

The total depth of the excavation is determined by the OSI's diameter, bedding thickness, hold-down pad (if required) depth of cover (including any effects of vehicular traffic) and slope and length of piping. Consult AHJ for additional requirements related to existing structures.


CAUTION:

DO NOT exceed maximum burial depth as predetermined by manufacturer. Check approval drawing for burial depth notes.

Bedding and backfill must be a homogeneous material consisting of compacted clean sand, pea gravel, No. 8 crushed stone (American Society of Testing and Materials - ASTM-448) or equivalent. (100% through a 1/2 inch (13 mm) sieve and no more than 12% by dry weight through a #200 sieve (0.0029 Inch (0.0754 mm)). Pea gravel shall be no larger than 3/4-inch (19 mm). See Fig. 6.

Fig. 6

Remove all large and sharp rocks/debris from excavation prior to lowering OSI into position.

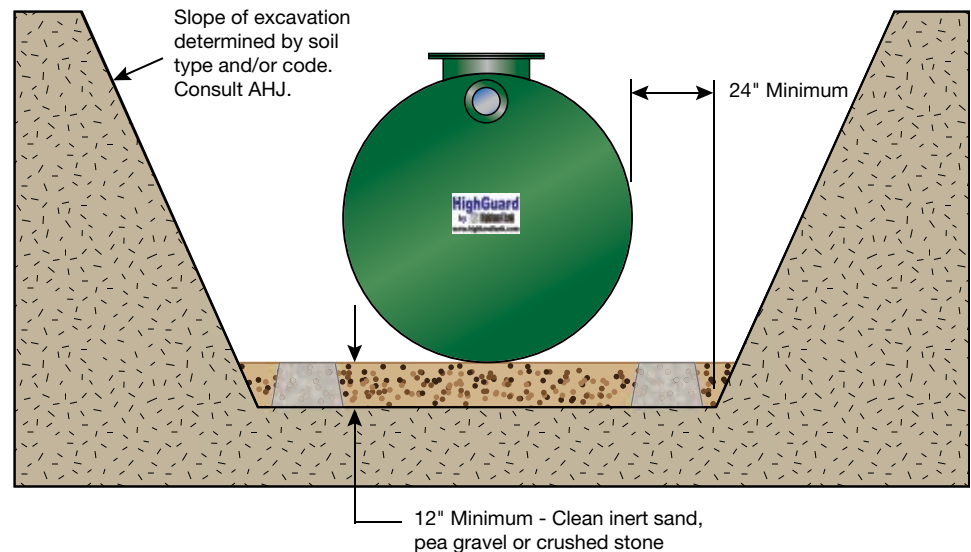


Note: When OSI is to be installed on a concrete pad, a minimum of 6 inches of bedding material must cover the entire pad. Grade and level bedding to extend at least two feet around the perimeter of the OSI for backfill operations.

Excavation and Bedding continued

The bottom of the excavation must be covered with bedding material to a minimum depth of one foot, suitably graded and leveled and extend at least two feet around the perimeter of the OSI for backfill operations. Place at least 24 inches of backfill between any adjacent OSIs, tanks and excavation walls. See Fig. 7.

Fig. 7

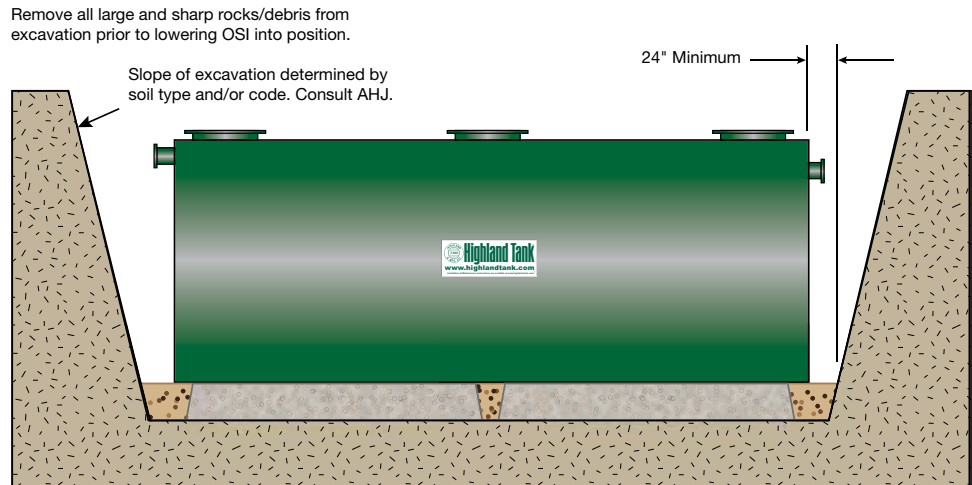

Placement of the OSI

The OSI must be installed in a level and plumb position.

Check elevations at each end of the OSI with a transit and adjust as necessary to 1/2 inch in 20 feet. Check elevations across the diameter of the interceptor tank and adjust to 1/4 inch in 10 feet.

Anchoring

High water tables or partially flooded excavation sites exert significant buoyant forces on OSI. Buoyant forces are partially resisted by the weight of the OSI, the backfill and any pavement atop the OSI. Additional buoyant restraint, when required, is obtained by using properly designed hold-down straps in conjunction with concrete hold-down pads or deadman anchors.


The use of steel cable and/or round bar as buoyant restraints is prohibited.

Steel hold-down straps must always be kept from contacting the OSI shell by an oversized separating pad made of inert insulating dielectric material.

Several hold-down methods are available for anchoring the OSI in the excavation. Consult AHJ and choose the method that completely satisfies all requirements for the installation location. Highland Tank's Deadman Anchoring System employs concrete deadman anchors and polyester hold-down straps.

When using deadman anchors, the bottom of the excavation (native earth) shall be covered with a minimum of 12 inches of bedding material suitably graded and leveled. Bedding and backfill shall surround the OSI to a width and depth of 12 inches minimum all around the OSI. Position deadmen as shown in Fig. 8, filling the space between them with approved backfill material.

Fig. 8

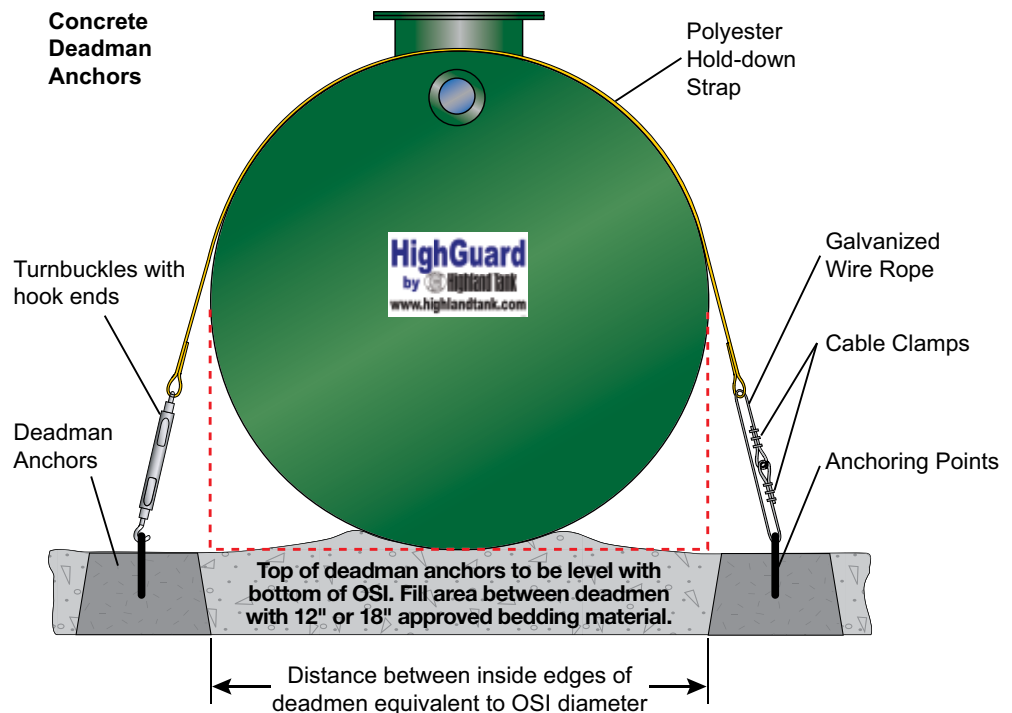


Anchoring continued

When anchoring by means of a concrete pad is required, the OSI must not be placed directly on the pad. See Fig. 9.

A layer of bedding material, 6 inches deep must be spread evenly over the dimensions of pad to separate the OSI from the pad. Bedding deeper than 12 inches may interfere with the fit of the hold-down straps. The OSI must not be placed on any other hard or sharp material, which might cause deformation of the OSI or damage to the coating.

Fig. 9

**Standard Hold-down Straps
with Concrete Hold-down Pad**

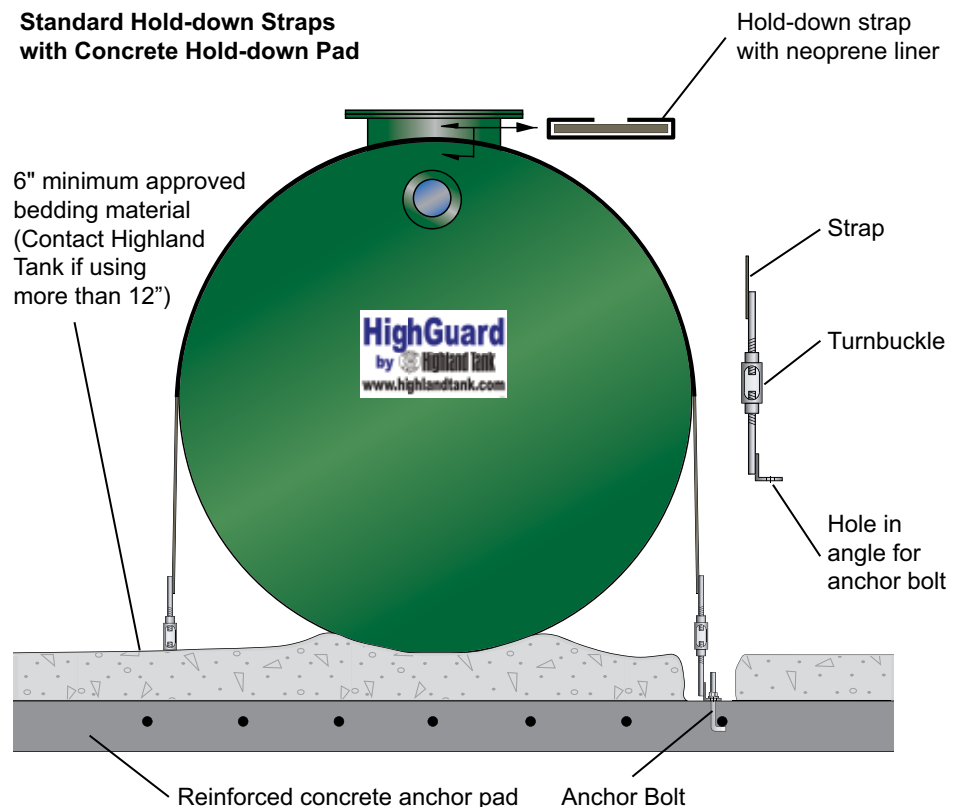

In tidal areas, backfill or bedding materials composed of small particles, such as sand, can migrate into native soils where larger aggregate, such as pea gravel or crushed stone, exists. Resultant voids can create an uneven support for the OSI. The use of filter fabric is recommended.

Backfilling

Approved backfill similar to bedding material must be placed around the entire OSI to create a uniform homogeneous environment. Be certain that foreign matter is not introduced into the excavation or backfill. Special care shall be taken when backfilling to ensure that the OSI is fully and evenly supported around the bottom quadrant and that no damage to the coating occurs. See Fig. 10 and 11.

Fig. 10


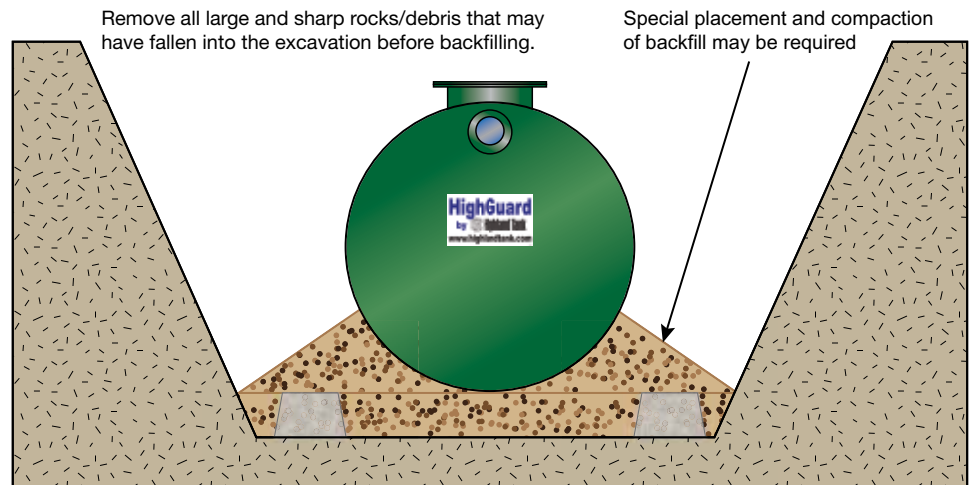


Fig. 11

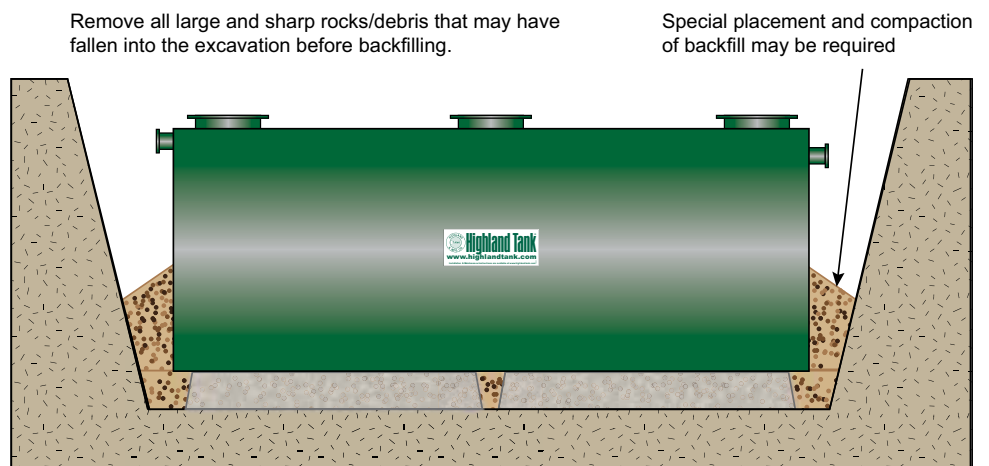

The backfill should be placed carefully around the OSI to the top of the OSI.

Ballasting

In areas where there is the presence of ground water or a high water table, ballasting may be necessary for additional downward force on the OSI. If required, fill OSI with clean water. After ballasting is complete, check elevations for proper tolerances.

Note: Highland Tank recommends maintaining the excavation dewatering process until installation is complete.

Piping & Venting

Inlet piping installation should be straight and true with as few turns as possible to limit turbulence. (When dielectric isolation is required, consult Steel Tank Institute ACT-100-U® Installation Instructions, R971 or STI-P3® Installation Instructions, R821 and Petroleum Equipment Institute PEI/RP100 for further instructions.)

Attach inlet/outlet piping (contractor supplied) to flanged inlet/outlet pipes on the OSI. Inlet and outlet inverts were established during manufacturing. Do not modify without first consulting Highland Tank.

The OSI inlet and outlet piping must be sloped from 1/8 inch to 1/4 inch per foot to maintain gravity flow. A greater slope, or a free fall of wastewater in the OSI will cause turbulence, which adversely affects OSI performance. Piping must also be designed to limit flow into the OSI to the flow rate specified. Use of a flow control device may be required.

OSI outlet piping must be designed to flow at a rate equal to or greater than the inlet piping to avoid any potential backup.

IMPORTANT

It is recommended that the OSI be fitted with properly sized inlet and outlet shut-off valves (contractor supplied) for emergency shut-down and service purposes.


Attach manway extensions, riser and sensor pipes and any other contractor supplied piping to the OSI. Take special care to prevent damage to any gaskets or pipe threads.

OSI Venting Guidelines

OSI is designed for operation at atmospheric pressure ONLY. OSI inlet, outlet and manways MUST be vented to atmosphere to assure proper operation. See Fig. 12.

Note: Inlet pipe does NOT need to be vented when influent is being pumped into the separator. Likewise if the effluent is being pumped, the outlet pipe does not need to be vented.

Fig. 12

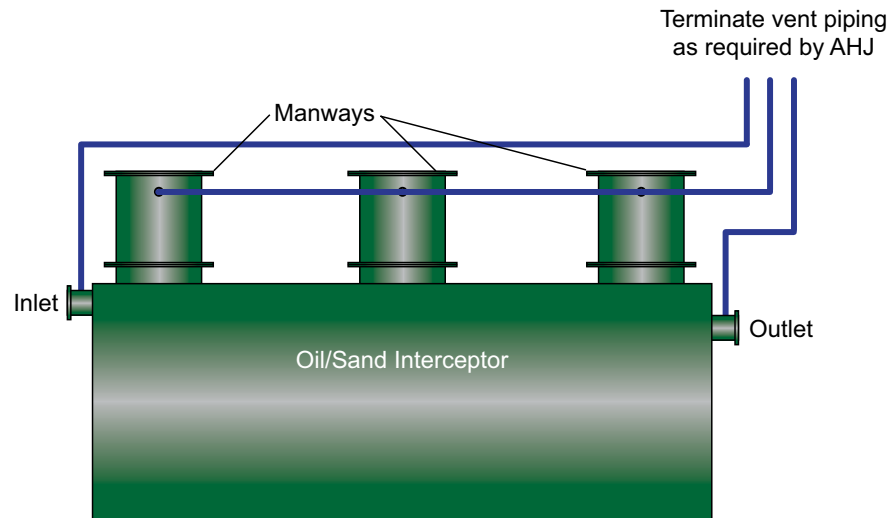

As shown, the manway vents can be manifolded together to one common vent line. **The inlet and outlet vents must each have their own separate, dedicated vent line for the following reasons:**

- OSI inlet is vented to prevent hazardous gases from building up in inlet pipe draining the catch basin or trench drain (which may be in a building).
- OSI outlet is vented to prevent siphoning during full flow into a flooded storm sewer or flooded pit.
- OSI manways are vented to prevent hazardous gases from building up in manway risers.

Venting the inlet, manways and outlet independently prevents raw oil or oily wastewater from bypassing and exiting the OSI in the event of a surge or vapor condensation.

Vent piping requirements may vary by code. Check with AHJ. Terminate all vent piping per local code and AHJ.

Note: OSI owners may need to provide flame arrestors where required by governing codes for safety. Check with AHJ.

OSI with Gravity Oil Skimmers and/or Monitoring Equipment

If an oil skimmer is to be installed, piping between the OSI and the waste oil tank must be sloped between 1/8 inch to 1/4 inch per foot to maintain gravity flow.

For OSI with oil level sensors, pump-out pipes and leak detection sensors, install riser pipes using compatible non-hardening sealant, taking care not to cross thread or damage the nonmetallic bushings. For electrical wiring details, please refer to the manufacturer's sensor and control panel installation instructions.

Final Tightness Test

An additional tightness test may be required after OSI is secured and backfilled to the top of the OSI. Air pressure for air testing after installation must not exceed 5 PSIG and must be measured at the top of the OSI.

Sealing of Lifting Lugs and Pipe Connections

During the installation process, steel can become exposed at the lifting lug due to the handling of the OSI. These areas, along with all other exposed steel surfaces, must be covered using the coating kit supplied by the manufacturer.

Apply supplied coating touch-up to all exposed steel surfaces of the OSI and allow to cure completely.

After an testing has established tightness, apply coating to the OSI fittings and allow to cure prior to backfill. Coating must include the entire plug on unused fittings.

After all coating touch-up applications, the installer must verify that all of the coating has cured (adequate material hardness and solidification) prior to final backfill that will completely cover the OSI.

Cure time will vary depending on temperature and conditions. Contact Highland Tank if additions touch-up coating is needed


Final Backfilling

Deposit homogeneous backfill carefully around OSI to a depth of at least one foot over OSI to avoid damage to coating especially where tamping is required. Refer to the National Fire Protection Association's Regulation NFPA 30 and state or local codes for minimum depth of cover required.

Finally, carefully deposit backfill over the OSI up to the elevation needed to complete grade level finishing. See Fig. 13 for minimum burial depth. Consult approval drawing for maximum burial depth.

Use grade level covers and street boxes to access the manways, sensors, or pump-out pipes. The grade level covers above the access manways must be of a greater diameter (i.e. 36 inch grade level cover over a 24 inch access manway).

Fig. 13

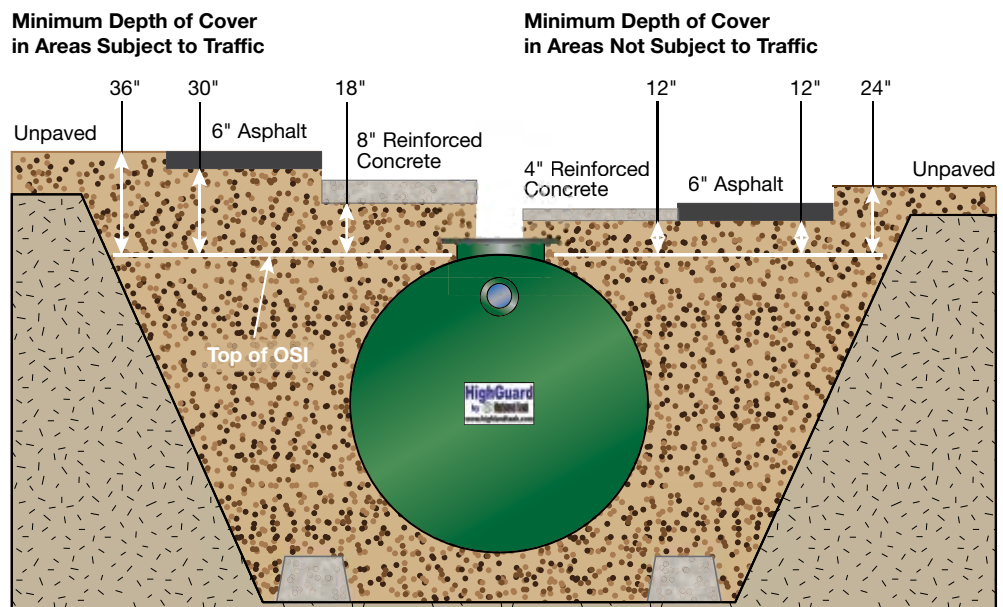

Optional OSI Electronics

Optional OSI Electronics may have been provided for your project.

Recommended optional OSI Electronics may include:

- Oil/Water Interface Level Sensor
- High Fluid Level Sensor
- Leak Sensor (for interstitial monitoring of double-wall OSI)
- Alarm/Control panel

Optional OSI electronics must be installed after OSI has been installed and before start-up procedures are initiated. For OSI electronics installation details, please refer to the specific device's installation instructions.

Oil Level /Leak Alarms (Optional)

For easy, efficient operation and maintenance, the OSI may be equipped with an Oil/Water Interface and Level Sensor and/or Leak Detection Sensor to activate warning alarms at high oil levels or in the event of a leak.

Oil accumulates in the OSI until a predetermined level is reached, at which time the oil level sensor activates an alarm signaling that the OSI is full of oil. The level sensor is a magnetic float switch type for oil/water interface detection.

The interstitial space of a double-wall OSI can be monitored for a leak of either water or hydrocarbons by liquid-only or product specific sensors.

Highland Tank offers a wide range of control panels and sensors to monitor the operation of your OSI. All panels include audible/visual signals to alert the operator of system changes and system test buttons.


Highland Tank's typical standard panels are listed here for quick reference.

HTAP-1	Single-channel panel. Performs High-Oil Level sensing OR for Liquid Only Leak Detection with non-specific alarm.
HTAP-2	Two-channel panel. Performs High-Oil Level AND High-High-Oil Level sensing OR High-Oil Level sensing AND for Liquid Only Leak Detection with non-specific alarms.
HT-A2	Two-channel panel. Performs High-Oil Level AND High-High-Oil Level sensing with specific alarms.
HT-A2-LD	Three-channel panel. Performs High-Oil Level, High-High Oil Level sensing AND Liquid Only Leak Detection with specific alarms for oil levels only.
HT-A2-LDFW	Four-channel panel. Performs High-Oil Level, High-High Oil Level sensing AND Leak Detection for Fuel or Water with specific alarms for each.


Oil Level Controls (Optional) continued

If your OSI has a control panel and sensors installed, locate the diagram for your panel and then refer to the button/light function listing for operation and required action. Please consult the job-specific project information should you need detailed information regarding a specific alarm/control panel. Contact Highland Tank if you need additional assistance


**HTAP-1 - 1-Channel
High-Oil or Leak Detection**

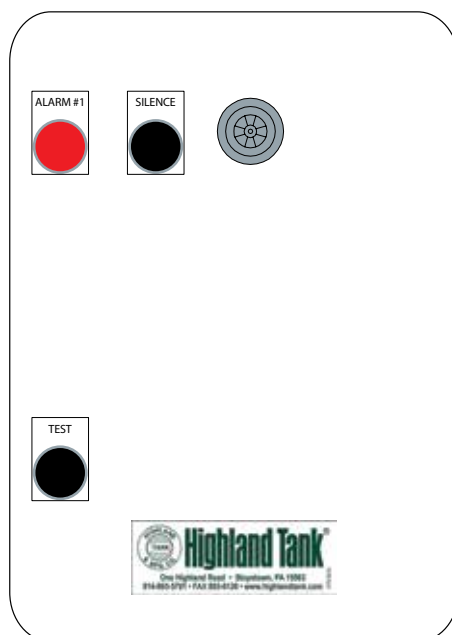


**HTAP-2 - 2-Channel
High-Oil and Leak Detection
or High-Oil and High-High-Oil**

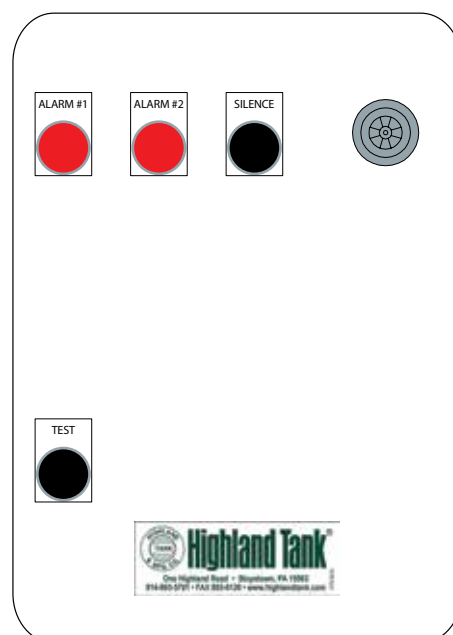


**HT-A2 - 2-Channel
High-Oil and High-High-Oil Specific**

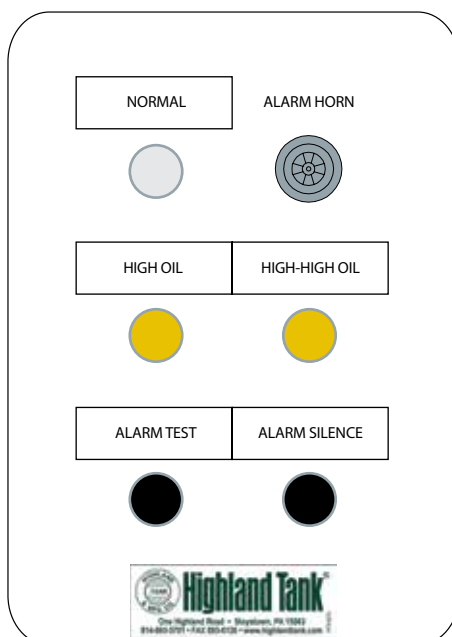

**HT-A2-LD - 3-Channel
High-Oil, High-High-Oil
and Leak Detection Specific
Non-discriminating**

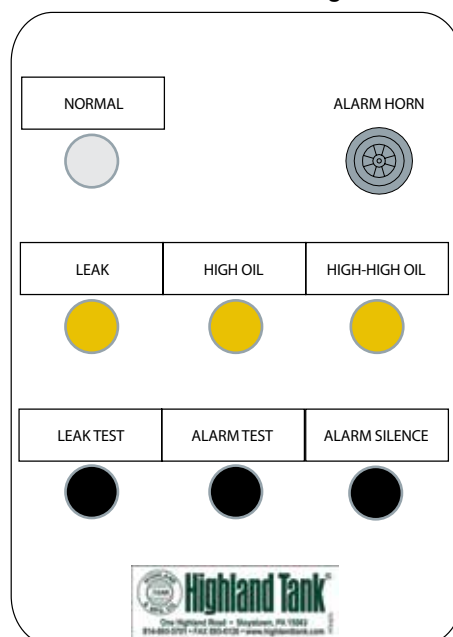

**Oil Level Controls
(Optional) continued**

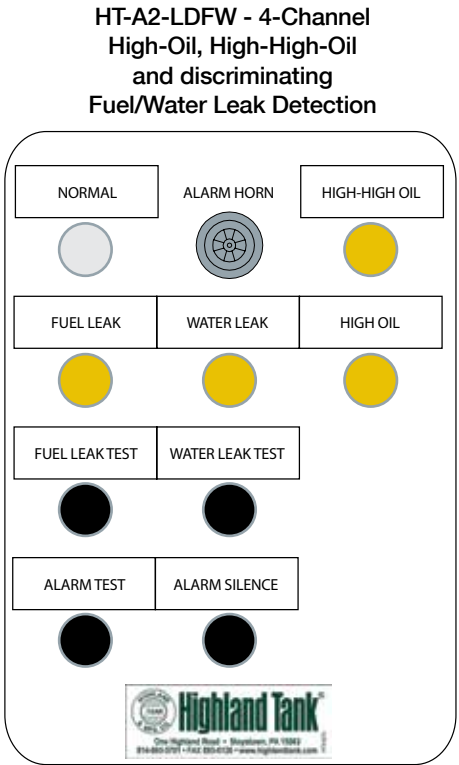

Below is a listing of Highland Tank’s control panel features. Refer to the previous diagrams to help understand the function of your particular panel.

Panel Light or Button	Description / Function
NORMAL LIGHT (White)	Indicates that system is active in normal operating (non-alarm) mode.
ALARM TEST/TEST	Temporarily closes the control panel circuits to provide a system test.
ALARM HORN	Works in conjunction with yellow alarm lights. Emits audible (90-95 decibel) sound alerting operator that system has entered an alarm mode.
ALARM/SILENCE SILENCE	Silences the audible alarm temporarily for operator to perform service. (Does not cancel alarm mode.)
ALARMS (#1 & #2)	Alert operator of High-Oil level, High-High-Oil Level or Leak Detection depending on the connected sensor.. See Alerts and Responses below.

**Oil Level
Controls
(Optional)
continued**

HIGH-OIL

Alerts operator of High-Oil level. Oil has reached a predetermined level and must be pumped out as soon as possible.
RESPONSE: Stop OSI operation. Pump out oil. Refill OSI with water to reset sensors. Resume OSI operation.

HIGH-HIGH-OIL

Alerts operator of High-High-Oil level. Oil has reached a critical predetermined level and must be pumped out immediately.
RESPONSE: Stop OSI operation. Pump out oil. Refill OSI with water to reset sensors. Resume OSI operation.

LEAK

Alerts operator of a leak in either primary or secondary wall of OSI. Does not discriminate if leak is fuel or water.
RESPONSE: See Leak Detection System procedure.

Fuel/Water Leak Sensor

LEAK TEST

Temporarily closes the control panel's leak detection circuit to provide a system test.

FUEL LEAK

Alerts operator of a leak from primary wall of OSI into interstice.
RESPONSE: Contact Highland Tank for procedure. Fuel leak will cause only fuel leak alarm.

WATER LEAK

Alerts operator of a water leak from primary or secondary wall of OSI into interstice.
RESPONSE: Contact Highland Tank for procedure. Water leak will cause both fuel and water leak alarm.

FUEL LEAK TEST

Temporarily closes the control panel's fuel leak detection circuit to provide a system test.

WATER LEAK TEST

Temporarily closes the control panel's water leak detection circuit to provide a system test.

**Leak Detection
System Procedure
(Optional)
Double-wall OSI ONLY**

Leak Detection Procedure for fuel or water in the OSI interstice.

For easy and efficient monitoring of the interstitial space, the OSI may be equipped with a Liquid Leak Detection Sensor to activate warning alarms if the interstitial space becomes filled with hydrocarbons or water during operation.

If the audible alarm is activated during operation, it can be silenced by momentarily depressing the SILENCE push-button.

The interstitial space can be checked by:

Stopping OSI operation. After flow has stopped, remove leak detection sensor from monitoring pipe being careful not to damage sensor or communication wiring. Place sensor in a dry, safe place during water removal procedure.

Use a gauge stick to inspect the monitoring pipe for the presence of oil or water.

IMPORTANT:

If a suspicion of a leak exists, contact a tank testing professional to remove fuel and test tank for tightness.

If water is found, note level. Pump-out interstice. Water in the interstice can sometimes be caused by condensation or ground/surface water infiltration.

It may be necessary to pump out several times with a waiting period between pump-outs, to remove all of the accumulated water. Starting level will lower with each pump-out.

After water has been removed from OSI interstice, reinstall sensor and wiring making sure to seal all threaded connections with approved sealant. Restart OSI operation as described earlier.

OSI Start-Up

IMPORTANT:

The OSI must be full of water, as described below¹, to operate.

CAUTION:

Separated liquid oil and vapors are flammable and/or combustible.

Service personnel must comply with all established OSHA regulations governing the facility and services. These include, but are not limited to, the use of approved breathing equipment, protective clothing, safety equipment and other requirements.

The final state of all wiring must comply with all applicable electrical and fire code standards.

This system must be properly vented by installer in accordance with applicable plumbing and safety codes for venting of combustible gases.

All electrical equipment, connections and wiring must be protected from submergence and infiltration of water.

Intrinsically safe sensor wiring must be kept in a separate conduit from non-intrinsically safe power wiring. Run non-intrinsically safe power wiring in steel conduit grounded at the panel end only and per applicable electrical code.

Filling the OSI

Open the OSI inlet and outlet pipe valves.

If the OSI has not yet been filled with water, as may have been required for ballasting, (see page 18) fill with clean, fresh water at this time. The OSI must be full of water before any wastewater can be treated. The OSI can be filled through the facility's drain leading to the OSI inlet or through a manway.

If filling by manway, place the hose through the 4 inch diameter Gauge Port in the inlet-side Manway Cover or in the 24 inch diameter Manway so that hose outlet rests inside the OSI.

¹The OSI is full when water drains out of the Outlet. Check the water level using a gauge stick. The level on the gauge stick must equal the invert of the Outlet Pipe as measured from the OSI bottom.

To ensure that no blockage exists, allow water to flow through the facility drain which leads to the OSI Inlet. Check the Outlet Pipe to make sure that water is flowing through the OSI. Check the Inlet Pipe and facility's drain for water backup.

OSI Start-Up continued

Prior to Oil Level Sensor Installation

Oil Level Controls (optional)

Check sensor with a continuity meter. Both switches are normally closed in a low position (dry condition).

And/Or

Connect the sensor to proper panel wiring. Refer to specific panel wiring diagram supplied.

Switch on the panel.

Move the bottom float up and down on the probe stem. As the bottom float approaches the lower grip ring, the High-High Oil Level Warning Alarm (light and audible alarm) should activate.

Move the top float up and down on the probe stem. As the top float approaches the lower grip ring, the High Oil Level warning alarm (light and audible alarm) should activate.

Note: If one or both alarms do not activate properly, check the panel and sensor wiring for proper connections and continuity.

As installed OSI fills with water, both floats will be in low position (dry condition) and both alarms will be activated.

After Oil Level Sensor Installation

Note: If alarms are not activated, check the wiring connections.

While the OSI is filling with water, the High-High Oil Level Warning Alarm should deactivate, and soon thereafter the High Oil Level Warning Alarm should deactivate.

Note: If the alarms do not deactivate upon filling, remove the sensor and check for float binding or poor electrical connections.

Contact Highland Tank @ 814-893-5701 should you need additional assistance.

OSI Start-Up continued

Skimmer Adjustment

Ensure that OSI is completely full of water, and that water level is at the top of or flowing from effluent transfer pipe.

Initiate expected rated flow to oil/water separator. Maximum liquid operating level is established when water surface in separation chamber has stabilized.

Make a permanent, waterproof mark, at water level, on the inside wall of the OSI for reference. Stop flow to OSI.

Bucket Style Skimmer

Adjust the Oil Skimmer's rubber fitting up or down so that top of fitting is approximately 1/8" above the maximum operating level.

Sawtooth Style Skimmer

Adjust the Sawtooth Skimmer by rotating the skimmer pipe so that the skimming level (bottom of V-notch) is approximately 1/8" above the maximum operating level mark.

NOTE:


If necessary, the Effluent Transfer Up-Corner Pipe(s) rubber fittings can be adjusted to raise or lower the OSI chamber fluid level. This is typically utilized to make large adjustments. The Skimmer Pipe rubber fitting should only be utilized to make small adjustments to skimming level.

After adjustment, initiate intended flow rate to the OSI to confirm no water transfer to the oil pump-out chamber. If necessary, repeat adjustment until skimmer is set to prevent water entry into the oil pump-out chamber.

NOTE:

An oil skimmer set too low will allow water to enter the oil chamber, while a skimmer set too high will prevent oil from skimming. Some fine tuning may be required to set the skimmer at optimal level.

Bucket Style

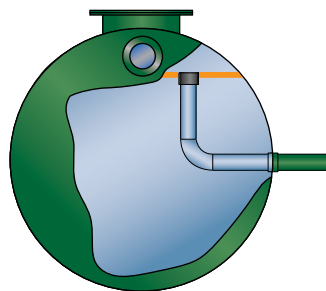

Sawtooth Style



Operation

The OSI is a stationary, wastewater treatment tank, filled with water. Internal baffles and chambers enhance the oil/sand interception process. Waste accumulates within the OSI while effluent is discharged by gravity.

Highland Tank OSIs will not remove oils with a specific gravity greater than designed for, chemical or physical emulsions, dissolved hydrocarbons, solvents, or volatile organic compounds (VOC). Highland Tank has specialty systems that have been designed for treatment of wastewater contaminated with these pollutants.

During operation, the wastewater flows into the OSI through the inlet pipe and is directed over the Velocity Head Diffusion Baffle, a reinforced steel plate inclined at a 45 degree angle.

The Velocity Head Diffusion Baffle

- dissipates the velocity and turbulence of the incoming water,
- redirects the flow downward and toward the OSI head to start serpentine flow process,
- reduces and distributes the flow evenly over the OSI's cross-sectional area,
- isolates the inlet turbulence from the rest of the OSI.

In the sediment collection area, heavy solids settle out and are collected behind the Sludge Baffle. Concentrated oil slugs rise immediately to the surface. Free floating oils and grease in the wastewater gradually separate from the water due to their differences in specific gravity and will rise to the top of each chamber.

Flow from one chamber to the next is by gravity displacement through the transfer pipes. When wastewater enters the OSI, the cleaner water from the bottom of each chamber is moved into the next chamber while trapping the floating and sinking contaminants.


In each subsequent chamber, additional oils and solids are removed due to the specific gravity differences. During periods of operation and wastewater flow, oils and solids continue to accumulate in the OSI chambers.

Treated water is only discharged from the bottom of the final OSI chamber via the outlet pipe during periods when wastewater flows into the OSI. Wastewater flows from the OSI to a sanitary sewer or is pumped to be recycled for reuse.

Operation continued

Free-floating oil and greasy solids accumulate in the OSI until they are pumped out. Any and all oil recovered and removed from the OSI must be recycled or disposed of in accordance with federal, state and local regulations.

Operation Simulation

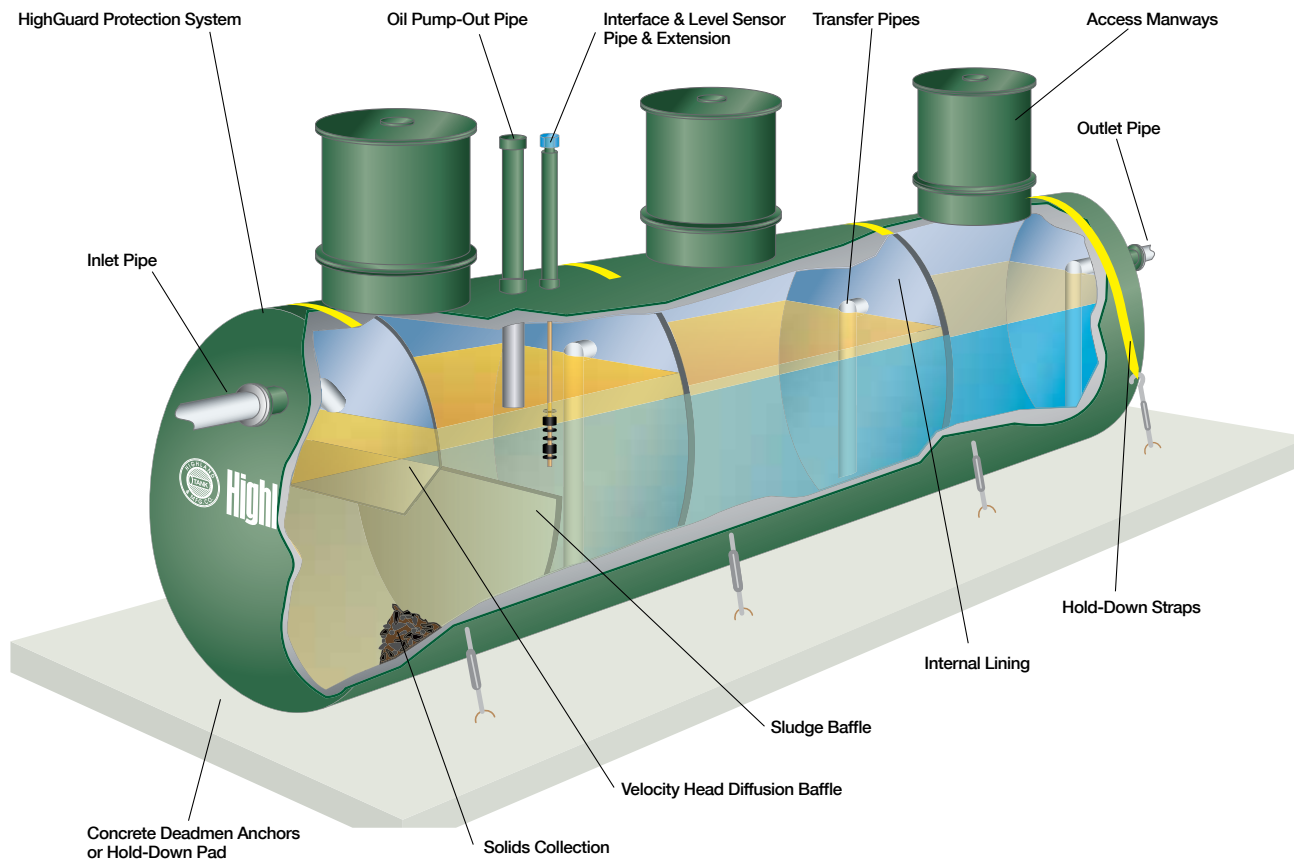

Maintenance

CAUTION:

Separated liquid oil and vapors are flammable and/or combustible.

WARNING:

Never enter an OSI or enclosed space, under any condition, without proper training and OSHA approved equipment. (Consult OSHA, Regulations for Permit-Required Confined Spaces. 29 C.F.R. § 1910.146.

All enclosed spaces must be properly vented prior to entry to avoid ignition of flammable materials or vapors. Atmosphere must be properly tested for combustible vapors and oxygen prior to entry.

Entering the OSI without using a self-contained breathing apparatus may result in inhalation of hazardous fumes, causing headache, dizziness, nausea, loss of consciousness and death. Required entry equipment includes, but is not limited to:

- Lifelines
- Safety harnesses (safety belts are unacceptable)
- Self-contained breathing apparatus
- Respirators (canister type)
- Rescue harness and ropes
- Horns, whistles, radios, etc. (for communication purposes)
- Explosion-proof lighting

Be sure to inspect and replace manway gaskets as necessary when the OSI is shut down for maintenance.

IMPORTANT:

Inlet and effluent pipe valves should be closed prior to OSI entry.

All liquid must be removed from the OSI prior to entry. Any and all oil recovered and removed from the OSI should be recycled or disposed of in accordance with federal, state and local codes and regulations.

Interior surfaces of the OSI will be slippery.

CAUTION:

OSI are designed for long-term, trouble-free operation. The following maintenance should be performed as needed or in accordance with a facility maintenance schedule.

Periodic inspection of:

- Upstream trench drains, sand interceptors and traps
- Inside of the OSI for sand, trash, sludge and oil build-up
- Effluent for oils and other contaminants in accordance with local codes and permits
- Oil level in accordance with local codes and permits

Maintenance continued

OSIs with oil level sensors require oil removal when the alarm is activated. Stop OSI operation, remove the oil from all chambers and then refill OSI with clean water (see Start-Up Instructions, page 28).

OSIs without oil level sensors require level checking by use of a sampling device or a gauge stick with water finding paste. Each chamber of the OSI must be checked at regular intervals to monitor oil levels.

The first chamber will contain the largest accumulation of separated oils. When the oil/water interface level surpasses the high-oil level or 20% of the OSI's working volume, oil must be removed and the OSI refilled with clean water.

Use a gauge stick and water finding paste to check the oil/water interface level in each chamber.

Step 1 - Measure and record the distance from the fluid surface to the bottom of the OSI.

Step 2 - Measure and record the thicknesses of the oil (top) and solids (bottom) layers.

Step 3 - Add thickness measurements of the oil and solids layers then divide this number by the distance from fluid surface to bottom of OSI, from Step 1, to obtain the accumulated wastes volume percentage.

If the combined oil and solids layers are equal to or greater than 20%, the interceptor is considered full. Stop OSI operation, remove accumulated oils and solids. Refill the OSI with clean fresh water and resume operation. (see Start-Up Instructions, page 28)

If this calculation is less than 20%, reduce pump-out frequency. If greater than 20%, increase pump-out frequency.

If the oil is not pumped out, the oil concentration in effluent may exceed the desired levels.

WARNING:

If contaminants are found, close the valve on the inlet line, determine what the requirements are for restoring working order and take appropriate action.

For optimum performance, maintenance is required once per year or when:

- the OSI is in alarm condition,
- the oil layer and/or the solids layer in the first chamber are 20% or greater than the depth of the OSI diameter,
- the effluent exhibits an oil sheen or contains high contaminant levels.

**Maintenance
continued**

Inspect OSI after a heavy rainfall to check for signs of malfunction due to an excessive flow rate.

If the OSI has been cleaned within the year and only bottom sludge has built up while the effluent water is contaminant free, it may be sufficient to vacuum the sludge from all chambers and refill OSI with clean water. (See Start-Up Instructions, page 28)

**Oil Removal Procedures
IMPORTANT:**

Oil should only be removed during non-flow conditions to ensure pure oil draw-off.

**Oil Removal Procedures
(with optional oil level
controls)**

Confirm that the High-Oil Level Warning Alarm is due to an actual high-oil level in the OSI, otherwise a mixture of oil and water will be removed. Oil levels can be verified using a sampling device or a gauge stick with water finding paste.

To minimize water contamination of the oil, connect the oil suction hose to the designated Oil Pump-out Pipe fitting (if present) or open and use one of the OSI manways to skim oil.

Using suction, remove the oil from all chambers. Refill OSI with clean water to deactivate the High Oil Level Alarm. (see Start-Up Instructions, page 28).

**Oil Removal Procedures
(without optional oil
level controls)**

Determine where the oil/water interface by using a sampling device or a gauge stick with water finding paste.

If oil/water interface level is beyond the maximum allowable level, oil needs to be removed and the OSI refilled with clean water.

To minimize water contamination of the oil, use the designated Oil Pump-out Pipe fitting (if present) or open and use one of the OSI manways to skim oil. Using suction, remove the oil from all chambers. Refill with clean water. (see Start-Up Instructions, page 28)

**Mixed Oil and Water
Removal Procedures**

Place a suction hose inside the OSI through either the Gauge Port or through the Sediment Chamber Manway.

The suction hose nozzle should be 12 inches or higher above the OSI bottom. If nozzle extends closer to the bottom, sludge may be inadvertently removed.

Using suction, remove all contents from the OSI. Refill with clean water (see Start-up Instructions, page 28).

Major Oil Spill Response Procedures

IMPORTANT:

A major oil spill is a spill that exceeds the normal oil storage capacity of the OSI. In the event of a major spill, notify proper authorities as required by federal, state and local laws.

After a major oil spill, the OSI should always be emptied, cleaned and refilled with clean water.

Oil Spill Removal Procedures (with or without optional oil level controls)

If OSI has optional oil level controls, confirm that the High and High-High Oil Level Alarms are activated due to an actual High-High oil condition.

Determine exactly where the oil/water interface is located using a sampling device or a gauge stick with water finding paste.

Open the Gauge Port or Sediment Chamber Manway.

Place sampling device or gauge stick into the OSI through the Gauge Port or Manway to determine the oil/water interface location.

Place a suction hose inside the OSI through either the Gauge Port or through the Manway.

Lower hose to exact oil/water interface location. If the suction hose nozzle extends lower than the oil/water interface, water may be inadvertently removed with the oil.

Using suction, remove the oil from all chambers.

Refill with clean water (see Start-Up Instructions, page 28).

If oil is still visible on the surface of the OSI or the alarms remain on, suction out the oil and refill with clean water.

Continue this sequence until only sheen of oil is visible on the surface of the OSI or the alarms deactivate.

Sludge Removal Procedures

Determine exactly where the sludge/water interface is located using a sampling device or a gauge stick.

Open the Gauge Port or Chamber Manway.

If used, insert gauge stick into the OSI through the Gauge Port or Manway. Alternately, a sampling device enables taking accurate readings on settled solids to any depth in the OSI.

Slowly lower the gauge stick until it comes into contact with the sludge blanket. Mark the stick.

Push the stick downward until it comes into contact with the Striker Plate on the OSI bottom. Mark the stick.

The sludge depth is the difference between the two measurements.

Sludge Removal Procedure for full OSI

Place a suction hose inside the OSI through either the Gauge Port or through the Manway.

Lower hose to exact sludge/water interface location.

Using suction, remove the sludge while slowly lowering the suction hose nozzle until it comes into contact with the Striker Plate on the OSI bottom.

Refill with clean water. (See Start-Up Instructions, page 28.)

Sludge Removal Procedure for completely empty OSI

WARNING:

Never enter an OSI or enclosed space, under any condition without proper training and OSHA approved equipment (Consult OSHA, Regulations for Permit-Required Confined Spaces. 29 C.F.R. § 1910.146.

Using suction, remove the sludge and debris. Use caution to avoid internal coating damage.

Using a standard garden hose at normal pressure (40-70 PSIG), with or without a spray nozzle, loosen any caked oily solids. Use of hot water can be helpful. Direct the water stream to the OSI wall side and bottom.

Using suction, remove the resultant slurry.

General OSI Cleaning Procedures

If not properly maintained, the OSI may malfunction.

NOTE: Over a period of time sediment, oil and grease will build up on the walls and floors of the OSI. Dirt and heavy oil may also build up, reducing the unit's efficiency.

IMPORTANT:

It is recommended that the OSI be cleaned as needed or at least once a year. Keep inspection and maintenance logs and have them available for ready reference.

Cleaning Chambers

Remove manway covers to expose the individual chambers, being careful not to damage the gasket.

Pump-out liquid contents of OSI (see Mixed Oil and Water Removal Procedures, page 35).

Gauge the level of sand, dirt or debris with a sampling device or gauge stick.

IMPORTANT:

The level of sand, dirt or debris should not be allowed to accumulate higher than 12" from the bottom of the OSI.

Remove the accumulated waste with a suction hose (see Sludge Removal procedures, page 37).

Direct a high-pressure hose downward to loosen any caked oily solids on OSI sides and bottom.

NOTE: Use high-temperature, high-pressure washing equipment. Attach spray nozzle wand extension to the high-pressure hose.

Direct spray downward and toward the velocity head diffusion baffle to loosen any caked oily solids that may have accumulated on inlet head.

Direct the spray to the OSI wall sides, top and bottom.

Using suction, remove the resultant slurry.

Cleaning OSI Sensors

Disconnect all Oil Level Sensor wiring. Carefully remove the Oil Level Sensor.

Carefully check the Oil Level Sensor floats. If the floats do not slide easily on the stem or have sludge on them, clean the Oil Level Sensor. Use a parts washer and mineral spirits to remove accumulated oil, grease or sludge.

Check the Oil Level Sensor with a continuity meter to assure proper operation.

Place the Oil Level Sensor in a safe area to prevent damage.

Cleaning OSI Sensors

Remove manway covers over the manways to expose the OSI chambers. Be careful not to damage the gasket.

Gauge the level of sand, dirt or debris with a sampling device or gauge stick.

Remove the accumulated waste with a suction hose (see Sludge Removal Procedures). Direct a high-pressure hose downward and around to loosen caked oily solids on OSI sides, top and bottom.

Attach spray nozzle wand extension to the high-pressure hose. Direct spray downward and toward the sides to loosen up caked oily solids that may have accumulated.

Direct the spray to the OSI wall sides, top and bottom. Rotate the nozzle sufficiently and often so that all areas are reached with the spray.

Using suction, remove the slurry from all chambers.

Visually inspect the OSI interior and components for any damage.

NOTE: If any visual damage exists, contact Highland Tank for further instructions.

Ensure that gaskets are damage free. Realign gaskets and reattach manway covers.

Install the Oil Level Sensor in the Interface and Level Sensor Pipe. Reconnect all non-voltage carrying sensor lines to the Oil Level Sensor.

Refer to OSI Start-Up Instructions (page 28) for proper refilling and restarting procedures.

Troubleshooting Guide

Problems which occur during OSI operation can be the result of many factors. The following list identifies the most common problems, their possible causes and suggested remedies.

Problem	Possible Cause	Remedy
Excessive oil concentrated in OSI effluent water	Wastewater pumped into the OSI causing emulsification of oil droplets in the clean water	Adjust/change pump Change to gravity flow. Add additional treatment
	Flow rates exceeding rated capacity causing emulsification of oil droplets in the clean water	Decrease flow.
	Presence of detergents or surfactants causing emulsification of oil droplets in the clean water	Detect and remove source of harmful detergents.
	Oil levels higher than rated storage capacity, causing separated oil to carry-over	Remove oil.
	Excessive flow turbulence into OSI causing more mechanical emulsions	Check inlet Pipe and Valve Design. Check for debris in inlet piping. Decrease flow.
	Presence of dissolved hydrocarbons	Remove source of hydrocarbon.
	Presence of excessive dissolved or suspended solids leading to OSI, inside OSI or in effluent (Solids or clay may be coated with oil).	Install Highland Collection Catch Basin in front of OSI and clean OSI.
	Oil is of a higher specific gravity than was specified for OSI	Remove source of high specific gravity oil, or decrease flow rate. Add additional treatment
	Wastewater pH is high, causing chemical emulsification	High pH is usually caused by high alkaline cleaner. Eliminate source of high pH.

Troubleshooting Guide continued

Problem	Possible Cause	Remedy
Wastewater back-up in drainage area.	Excessive sludge or debris build-up	Clean out OSI.
	Closed inlet or effluent piping valves	Open piping valves completely.
	Inlet piping vapor lock	Check to ensure inlet vent is operating properly.
	Debris	Clean catch basin, trench drains and/or OSI.
High suspended solids content in clean water effluent.	Excessive sludge or debris build-up	Clean out OSI.
	Excessive solids in storm water drainage area	Install Highland Collection Catch Basin in front of OSI and clean OSI.

If you have any additional questions regarding OWS problems, contact Highland Tank.

Email: wastewater@highlandtank.com

Phone: 814-893-5701

Appendix - A - Sample Inspection and Maintenance Log

Highland Tank - Oil/Sand Interceptor Inspection and Maintenance Log - Serial # _____

Use a separate log sheet for each unit

Facility Name: _____

Address: _____ City: _____ State: _____ ZIP: _____

Contact Name: (Please print) _____ Phone: () _____ - _____

OSI Unit Details

Model No.: OSI - _____ Flow rate: _____ (GPM) Recommended pump-out: _____ (GAL)

Location of oil/sand interceptor: _____

(e.g.: Building 1 basement, 1st St. parking garage, etc.)

Service/Maintenance Provider

Company Name: _____ License No.: _____

Address: _____ City: _____ State: _____ ZIP: _____

Contact Name: (Please print) _____ Phone: () _____ - _____

The Highland Tank OSI should be inspected on a regular schedule as determined by facility needs.

OSI Maintenance Log

WEEK - MONTH - YEAR

Date / / Work performed by:

Action taken:

Observations/comments:

Date / / Work performed by:

Action taken:

Observations/comments:

Date / / Work performed by:

Action taken:


Observations/comments:

Date / / Work performed by:

Action taken:

Observations/comments:

HT-TB Oil/Sand Interceptor Reference Drawing

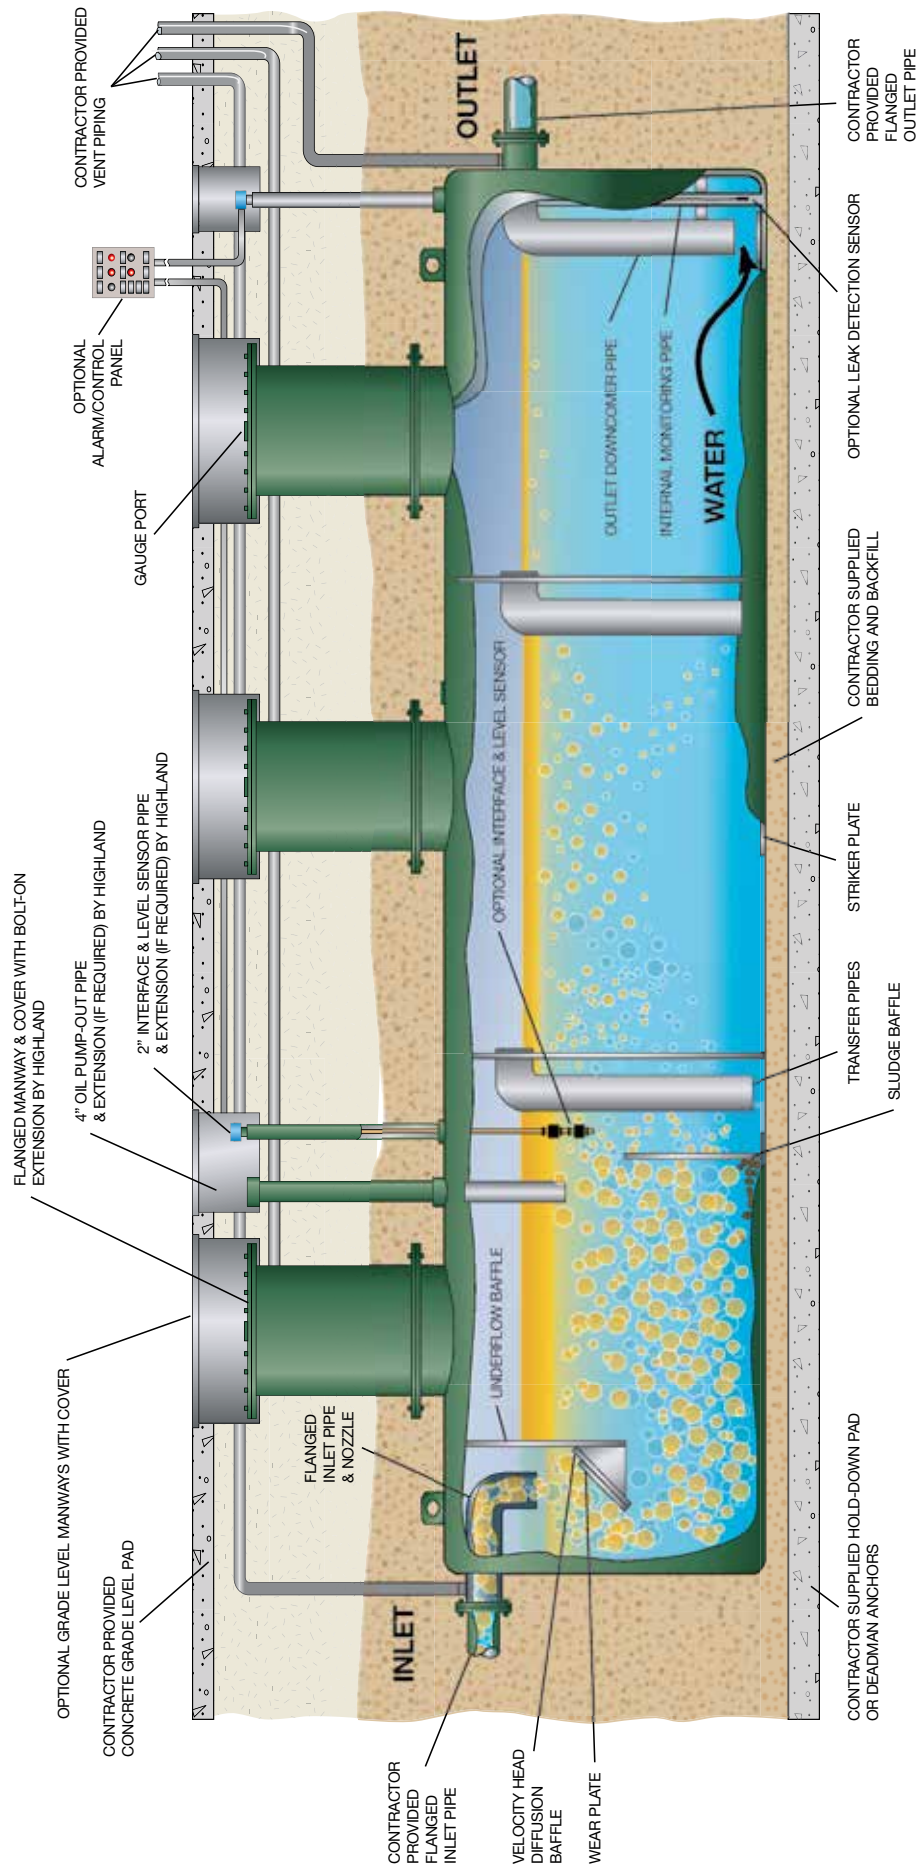

- NOTES:
- 1 - MANWAY AND PIPE EXTENSIONS VARY PER TANK SIZE AND BURIAL DEPTH
 - 2 - SENSOR AND PUMP-OUT PIPES EXTEND TO THE SAME ELEVATION AS MANWAY EXTENSIONS

Underground Cylindrical Oil/Sand Interceptors

HT-2051

User Manual

Installation, Operation & Maintenance

www.highlandtank.com

wastewater@highlandtank.com



Stoystown, PA

One Highland Rd.
Stoystown, PA 15563
(814) 893-5701

Manheim, PA

4535 Elizabethtown Rd.
Manheim, PA 17545
(717) 664-0600

Watervliet, NY

958 19th St.
Watervliet, NY 12189
(518) 273-0801

Greensboro, NC

2700 Patterson St.
Greensboro, NC 27407
(336) 218-0801

Friedens, PA

1510 Stoystown Rd.
Friedens, PA 15541
(814) 443-6800

Clarkston, MI

4701 White Lake Rd.
Clarkston, MI 48346
(248) 625-8700

Mancelona, MI

9517 Lake St.
Mancelona, MI 49659
(231) 587-8412